


Floor Drier

OPERATION INSTRUCTIONS

FA650/FA650B

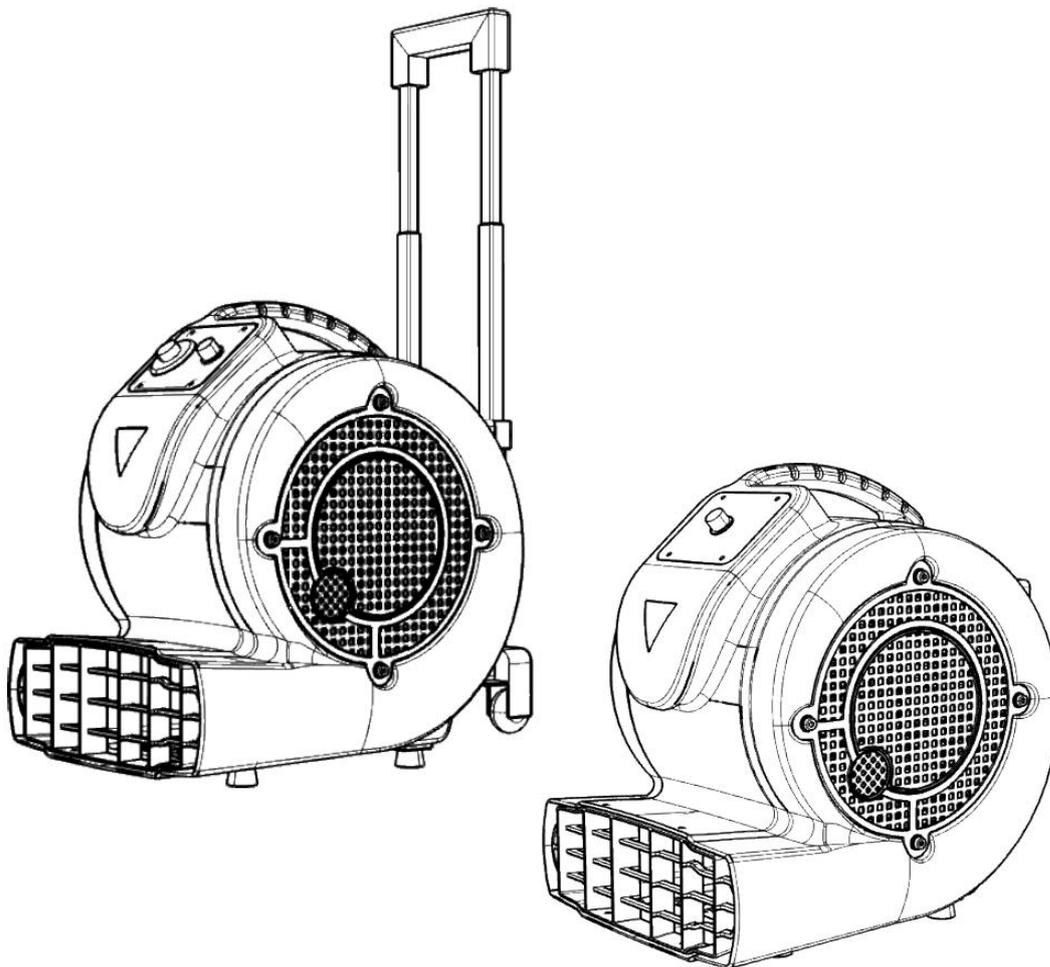

03/2024

Do not use this device without reading this manual.

BRIEF INTRODUCTION

The appearance of the hair dryer is light and beautiful. Made of high quality material, polyethylene shell, and all reliable and durable. The three speed switch can adjust the air flow freely and operate flexibly. Large blast turbine, Produce more air flow, improve work efficiency. Strong wind power, low noise, used in hotels, factories, warehouse, and all kinds of wet places.

1. Before using this machine, you must read this operation manual carefully.
2. Check the power cord before use, and make sure that the power cord is not damaged before use.
3. If the power cord is damaged or the machine fails, it must be replaced by the maintenance department of the purchasing department or similar full-time personnel
4. Do not put the machine into water.
5. Do not block the protective net with cloth or other soft objects, which may cause overheating of the motor.

6. Do not use the machine outdoors when it rains.

7. No tools or articles shall be placed into the machine in the operating room.

8. The power supply must be cut off before cleaning or maintenance, and cleaning and maintenance can be carried out after the wind turbine completely stops rotating work, otherwise electric shock or injury may occur.

Use steps

1.Cooling

(1) Make sure that there is no light or small object in the cooling place or the cooling material has enough weight, so as to avoid light or small objects. The cooling material was blown up causing injury.

(2) Turn on the air outlet of the air blower if necessary. However, adjust the speed of the wind wheel according to the air volume you require.

2.Ventilation

(1) Make sure that there are no light and small objects in the place where air exchange is needed.

(2) Tilt the air outlet of the blower upward 45-90 degrees, aim at the air vent of the room, turn on the hair dryer to circulate the air in the room.

3.Dry carpet and floor

(1) First confirm that there is no plastic on the floor or carpet that needs to be dried material or other light articles.

(2) Place the hair dryer flat on a corner of the floor or carpet. Turn on the hair dryer to form a strong airflow on the surface of the floor or carpet, so as to express the moist floor or carpet surface the carpet, etc. dries.

(3) When there are other substances under the wet carpet, they should be removed and air dried separately.

Technical parameter

No.	Name	Parameter
1	Voltage	220V 50 HZ
2	motor power	900 W
3	speed	1000/1200/1350 RPM
4	Foam hose	5 M
5	Weight	14.1 KG
6	Size	505*385*530 MM
7	Noise	≤60db
8	Safety data	II

Warranty Card

Name		Tell	
Postal address		Bill No.	
Purchase time		Number	
Product model		Date	
Replace accessories			
Fault description			

Warranty Conditions

1. Within the date of purchase, the motor is guaranteed for one year (if it is more than 7 days from the date of purchase, no replacement, only warranty).
2. Before using the equipment, you must understand the instructions and safety instructions.
3. During the warranty period, the artificial damage of warranty accessories will not be guaranteed.
4. During the warranty period, users who do not follow the operation instructions or dismantle and repair by themselves will not be guaranteed.(if repair is needed, the cost of production will be charged)
5. The buyer shall take the invoice to the place designated by the seller for repair, or send the machine back to our company for repair. (return freight, insurance paid by yourself)

